

Programmable Aerosol Dispenser

OPERATION MANUAL • MANUALE DI FUNZIONAMENTO



MODE D'EMPLOI • MANUAL DE OPERACIÓN

操作手冊 • GEBRAUCHSANWEISUNG

A series

1. Display Indicator

- when **ON** blinks, the dispenser is at **on-duty** mode.
Do not spray into eyes.
- when **can** blinks, the dispenser setting is fully used,
check and change refill. (refer to 4-4, 4-7-1)
- when **☒** blinks, the dispenser is at **low-battery** mode.
(refer to 4-8)
- when **🔊** displays, the dispenser is at **audio-on** mode
(refer to 4-7-2)

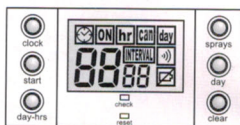

2. Start

- 2-1 Open cabinet. Pull hinged cover down from top.
- 2-2 Press **RESET** to re-program dispenser after inserting a new alkaline battery(s).
- 2-3 Select the setting by Selection Keypads that you wish to customize.
- 2-4 Insert aerosol refill and close (lock) cover.
(Can must lock securely into neck collar ring.)

Note! Do not insert aerosol can before inserting battery(s).
Do not RESET or spray into eyes.

3. Selection Keypads

- 3-1 **clock** local time
- 3-2 **start** daily ON time
- 3-3 **day-hrs** daily on-duty hours
- 3-4 **sprays** can spray numbers
- 3-5 **day** usage days
- 3-6 **clear** 3-6-1.. clear **can** and **day** counters
3-6-2.. audio on/off
- 3-7 **check** recall the settings
- 3-8 **reset** re-set to default setting
automatic 1 spray self-testing

4. Setting

- 4-1 **CLOCK** press **clock** to program the **local time** at 24hr00-time-system
eg. every 10 minutes per press as 0800, 0810, 0820 ... etc.
- 4-2 **ON START** press **start** to program the desired **on-duty time**
eg. every 1 HOUR per press as 22, 23, 00, 01, 02 ... etc.
Note! when **ON** blinks, the dispenser is at on-duty mode.
- 4-3 **hr DAY-HRS** press **day-hrs** to select the desired **on-duty hours**
day-hrs option: 8, 10, 12, 16, 24 hours
- 4-4 **can SPRAYS** press **sprays** to select spray application of the can (down counter)
(refer to 4-7-1)
spray option: 2000, 2500, 3000, 3400, 6000, 9000 sprays
note: • when **can** blinks, check and change the refill
• one-long-beep warning tone will be sounded for 24 hours
(to mute the warning tones, refer to 4-7-2)
- 4-5 **day DAY** press **day** to select the desired **service days** (down counter)
day option: 15, 30, 45, 60, 75, 90 days
- 4-6 **INTERVAL** **automatic count internally in accordance to above setting**
(refer to 4-4)
- 4-7 **🔊 CLEAR** 4-7-1 press **clear** to clear existing **sprays** and **day** counters
4-7-2 **Audio/Mute**
• when **🔊** displays, the dispenser is at **audio-on** mode
• press and hold **clear** for 3 seconds to activate **silent** mode
• press and keep holding **clear** again to previous **audio** mode
• **note:** during **silent** mode, keypads tones, warning tones for refill-change and low-battery will be mute as well
- 4-8 **☒** When the battery(s) is running out of power and only few minutes of operation remain, **☒** blinks and 2-short-beep warning tone will be sounded until a new battery(s) is replaced.
(to mute the warning tones, refer to 4-7)
- 4-9 **CHECK** press **check** as a shortcut to recall dispenser's existing working status
ON hr can day INTERVAL
(refer to 1/Display Indicator)
- 4-10 **RESET** press **reset** to factory original value
- default setting**



5-1 Spray Interval Manu / 噴霧設定對照表

can	day	HR	interval	can	day	HR	interval	can	day	HR	interval
2000	15	8	03:36	2500	15	8	02:53	3000	15	8	02:24
		10	04:30			10	03:36			10	03:00
		12	05:24			12	04:19			12	03:36
		16	07:12			16	05:46			16	04:48
	30	24	10:48		30	24	08:38		30	24	07:12
		8	07:12			8	05:46			8	04:48
		10	09:00			10	07:12			10	06:00
		12	10:48			12	08:38			12	07:12
	45	16	14:24		45	16	11:31		45	16	09:36
		24	21:36			24	17:17			24	14:24
		8	10:48			8	08:38			8	07:12
		10	13:30			10	10:48			10	09:00
	60	12	16:12		60	12	12:58		60	12	10:48
		16	21:36			16	17:17			16	14:24
		24	32:24			24	25:35			24	21:36
		8	14:24			8	11:31			8	09:36
	75	10	18:00		75	10	14:24		75	10	12:00
		12	21:36			12	17:17			12	14:24
		16	28:48			16	23:02			16	19:12
		24	43:12			24	34:34			24	28:48
2500	15	8	18:00	3000	15	8	12:00	3000	15	8	12:00
		10	22:30			10	18:00			10	15:00
		12	27:00			12	21:36			12	18:00
		16	36:00			16	28:48			16	24:00
	30	24	54:00		30	24	43:12		30	24	36:00
		8	21:36			8	17:17			8	14:24
		10	27:00			10	21:36			10	18:00
		12	32:24			12	25:55			12	21:36
	45	16	43:12		45	16	34:34		45	16	28:48
		8	18:00			8	12:00			8	12:00
		10	22:30			10	18:00			10	15:00
		12	27:00			12	21:36			12	18:00
	60	16	36:00		60	16	28:48		60	16	24:00
		24	54:00			24	43:12			24	36:00
		8	21:36			8	17:17			8	14:24
		10	27:00			10	21:36			10	18:00
	75	12	32:24		75	12	25:55		75	12	21:36
		16	43:12			16	34:34			16	28:48
		8	18:00			8	12:00			8	12:00
		10	22:30			10	18:00			10	15:00