


EASY-5 Programmable Sanitizer Digital Setting Manual

1. Display Indicator

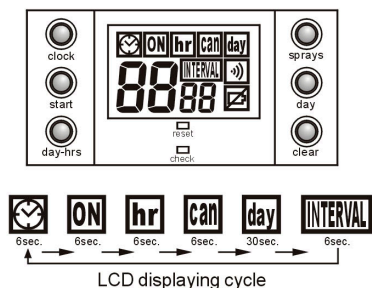

when **ON** blinks, the dispenser is at **on-duty** mode.

when **can** blinks, the dispenser setting is fully used, check and change refill. (refer to 4-4, 4-7-1)

when **day** blinks, the dispenser is at **low-battery** mode. (refer to 4-8)

when **INTERVAL** displays, the dispenser is at **audio-on** mode. (refer to 4-7-2)

2. Start

- 2-1 Open cabinet. Pull hinged cover down from top.
- 2-2 Press **RESET** to re-program dispenser after inserting a new alkaline battery(s).
- 2-3 Select the setting by Selection Keypads that you wish to customize.
- 2-4 Insert sanitizer refill, and put the actuator onto the pump, then close (lock) cover.

3. Selection Keypads

- 3-1 **clock** local time
- 3-2 **start** daily ON time
- 3-3 **day-hrs** daily on-duty hours
- 3-4 **sprays** refill pump numbers
- 3-5 **day** usage days
- 3-6 **clear** 3-6-1.. clear **can** and **day** counters
3-6-2.. audio On/Off
- 3-7 **check** recall the settings
- 3-8 **reset** re-set to default setting
dispenser will actuate once for self-test

4. Setting

- 4-1 **CLOCK** press **clock** to program the local time at 24hr00-time-system
eg. every 10 minutes per press as 0800, 0810, 0820 ... etc.

- 4-2 **START** press **start** to program the desired **on-duty time**
eg. every 1 HOUR per press as 22, 23, 00, 01, 02 ... etc.
Note! when **ON** blinks, the dispenser is at on-duty mode.

- 4-3 **DAY-HRS** press **day-hrs** to select the desired daily **on-duty hours**
option: 8, 10, 12, 16, 24 hours

- 4-4 **SPRAYS** press **sprays** to select pump application of the refill
(refer to 4-7-1)
option: 2000, 2500, 3000, 3400, 6000, 9000 pump application (**recommend to use Bio Fresh at 3400 pump applications**)
note: - when **can** blinks, check and change the refill
- one-long-beep warning tone will be sounded for 24 hours (to mute the warning tones, refer to 4-7-2)

- 4-5 **DAY** press **day** to select the desired **service days**
(down counter) **day option:** 15, 30, 45, 60, 75, 90 days

- 4-6 **INTERVAL** **automatic count internally in accordance to above setting** (refer to 4-4)

- 4-7 **CLEAR** 4-7-1 press **clear** to clear existing **sprays** and **day** counters

4-7-2 Audio/Mute

- when **day** displays, the dispenser is at **audio-on** mode
- press and hold **clear** for 3 seconds to activate **silent** mode
- press and keep holding **clear** again to previous **audio** mode
- **note:** during **silent** mode, keypads tones, warning tones for refill-change and low-battery will be mute as well

- 4-8 **check** When the battery(s) is running out of power and only few minutes of operation remain, **day** blinks and 2-short-beep warning tone will be sounded until a new battery(s) is replaced. (to mute the warning tones, refer to 4-7)


- 4-9 **CHECK** press **check** as a shortcut to recall dispenser's existing working status




(refer to 1./Display indicator)

- 4-10 **RESET** press **reset** to factory original value

default setting



5-1 Timer Cycle & Spray Interval Manu


can	day	HR	interval	day	HR	interval
 						

5-2 Timer Cycle & Spray Interval Manu

can	day	HR	interval	day	HR	interval

Note: press **clear** to clear **can** and **day** counters after inserting new sanitizer refill

AW-WEEKLY setting

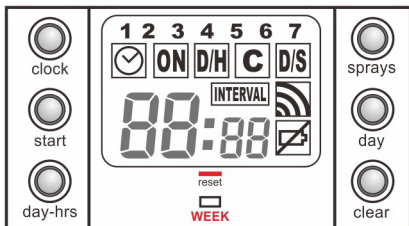

present time



refill can sprays



starting time



service days



HOURS per day
8, 10, 12, 16, 24



alarm ON/OFF



low battery icon

WEEK

- **short** press WEEK to select **day of the week**

1	2	3	4	5	6	7
Mon	Tue	Wed	Thu	Fri	Sat	Sun

- **long** press WEEK to select the desired **working days in a week**

5	Monday-Friday	1	2	3	4	5	x	x
6	Monday-Saturday	1	2	3	4	5	6	x
7	Monday-Sunday	1	2	3	4	5	6	7

OFF days volume will automatically **convert back to D/S** working days. Keep same cycle but shorten the interval minutes between actuating.